

















In the flexible metal wire cut a piece of 12 mm



With a needle
make a little hole
in the bottom of
the pump and stick the lever

Stick one end of the wire in the right side upstairs the lever



Bend the wire and stick the other end in the left part of the pump





